SPLASH DRONE 3+	Thank you for purchasing this SwellPro product, please read the entire contents of this manual thoroughly, to comprehensively familiarize yourself with the product before using it.
AC/DC Smart Balance Charger	The safety precautions in this manual are only intended to supplement local safety regulations.
User Manual	2. Important Precautions
Model: C1 - XR	Lithium batteries store a large amount of energy. Care must be taken to ensure that batteries and chargers are in good order and are compatible.
	 1.Do not use this product in direct sunlight, rainy or moist environments. 2.This product should be kept away from dangerous materials such as heat source, high pressure, water, flammable gas and corrosive agents. Operate the charger in a suitable environment 5 °C ~ 45 °C.
	 3.The product should be placed on a horizontal surface. Ensure the charger has sufficient ventilation (recommended >50cm). 4.Do not cover the product or battery during operation. Do not place the battery on top of the charger. 5.Do not charge non-rechargeable lithium batteries or incompatible batteries.
	 6.During operation, the charger and battery should be placed on a strong anti-flammable and non-conductive surface. Do not charge batteries on a car seat, carpet or other similar surfaces. 7.Only charge compatible batteries. Charging incompatible batteries is a fire risk.
	8. Do not charge or discharge a battery that has been physically damaged.9.Do not disconnect the input line during charging. After charging has completed, disconnect the battery and
	then the input line. 10. Keep the charger clean and dry. 11. Do not modify or disassemble this product.
WARNING: The SplashDrone 3+ utilizes high voltage LiHV battery technology in the drone battery. The battery charger supplied with the SplashDrone 3+ is only suitable for charging SwellPro LiHV batteries and the LiPo batteries for the SplashDrone 3+ remote controller.	12. Avoid using this product during thunderstorms. 13. Do not allow children under the age of 14 to use the charger. 14. Do not short-circuit or disassemble a battery. 15. NEVER LEAVE A LITHIUM BATTERY UNATTENDED DURING CHARGING OR DISCHARGING.
Charging non-LiHV, low voltage LiPo drone batteries (including the batteries for the older SplashDrone 3) with the LiHV charger is dangerous and may cause the battery to catch fire or explode.	16. In the event of fire, disconnect the charger and use a dry powder fire extinguisher to fight the fire.
SwellPro www.swellpro.com	
	1

 \wedge

ON CHARGE ANY OTHER BATTERY TYPE AND NEVER LAVE A CHARGING BATTERY UNATTENDED. Important the standard standar	nis charger can only charge LiPo-2S or LiHV	-45 batteries.		
1105 After the charger is powered on, it will enter standby mode. Connect the battery and the balance powered on, it will enter standby mode. Connect the battery oper. Image: Connected battery type. Image: Connected batter				
10S 1AI After the thager is powered on; it will entry studio, connect the battery type. Charging current value, connected battery type. Charging current value, check that the selected current date on exceed the battery specifications. Then press the "START" button to confirm the set value. Charging current value, check that the selected current date context conder the biology of the lower left corner of the current value. When the charger is used incorrectly or there is a fault, the charger will prompt an error message for the user to view. As shown below: Error messages: 11S 1.5 Start buttons will reset the countdown will delogable in the lower left corner of the current setting interface. The settings buttons will reset the countdown time. When the charger is used incorrectly or there is a fault, the charger and allow it to cool. VIELES 7.8 .6 .4 12 S .7 a8 .4 12 S .7 a8 .4 12 S .7 a8 .4 13 Start charging 3. Start charging Press and hold the "START" button for 2 seconds to start the charging are not available. Press the "ESC" to stop charging. The charger and allow it to cool. 0 VERTIE ERRORT The connected battery cannot be charged The input voltage is too high. The battery cannot be charged 0 ERRORT The connected battery has an incompatible number of cells. SAFETY TIMER The connected battery has an incompatible number of cells. 0 SETTINGS CHARGED The battery compt be asfer The battery cannot be charged SAFETY TIMER 12 Seconds The charger			Charging current	
Charging Current selection Singer Cu	10S 1A After the charger		type of battery \blacktriangleright $\boxed{LI2s 7a 8.4v}$ \checkmark Charging voltage	
TPO BAL-CHC231 ISS 2. Charging Current selection After entiring the main interface, you can press the "INC" and "DEC" buttons to set the charging current value. Check that the selected current does not exceed the battery specifications. Then press the "START" button to confirm the set value. Error messages: When the charger is used incorrectly or three is a fault, the charger will prompt an error message for the user to view. As shown below: If there is no action in 10 seconds the program will automatically recommend a charging current according to the number of cells and capacity. The 10 second countdown will be displayed in the lower left corner of the current steming inferface. The settings buttons will reset the countdown time. CONNECT BREAK! The battery has been disconnected from the charger cells of the battery cannot be charged OVERHEATING! The charger has overheated. Power off the charger and allow it to cool. START > 2 Seconds 3. Start charging Press and hold the "START" button for 2 seconds to start the charging program will meet the "START" button for 2 seconds to start the charging program will meet the "START" button for 2 seconds to start the charging program will be under of cells. HIGH CELL VOLT! The battery the battery cannot be charged IHGH CELL VOLT! The connected battery has an incompatible number of cells. SAFETY TIMER: The connected battery has not charged in a safe time. SETTINGS CHANGED The selected setting has been charged successfully. SHORT CIRCUIT! The charger output has been short-circuited.	the connected ba	ttery type.	Balanced charging mode bal 005.47 00121	
10S 2M Intermediation of the main field explores the "the and DCC burden is built main field explores the "start" button is built main field explores the "start" button is out the charging grunner value. Check that the selected current dees not exceed the battery specifications. Then press the "START" button is of the handler to the outform the selected current according current according to the number of cells and capacity. The 10 seconds the program will automatically recommend a charging current setting interface. The settings buttons will reset the countdown timer. Error messages: CONNECT EREAK! The battery has been disconnected from the charger Image: Start Charger and Capacity. The 10 seconds to start the charging program will automatically recommends a charging mode, the "INC," DEC" and "ENT" buttons are not available. Press the "SC" to stop charging. Start charging The campe is used incorrectly or there is a fault, the charger and allow it to cool. OVER CAPACITY! The connected battery are unbalanced. The battery cannot be charged in the input relation of press the "SC" to stop charging. Image: Start Point of the charger and allow it to cool. OVER CAPACITY! The connected battery cannot be charged in the input relation of the "START" button for 2 seconds to start the charging press and hold the "START" button for 2 seconds to start the charging relation and input relation of the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to start the charging relation and hold the "START" button for 2 seconds to st	JPO BAL-CHG ZS		Charging time	
Then press the "START" button to confirm the set value. When the charger is used incorrectly or there is a fault, the charger will prompt an error message for the user to view. As shown below: When the charger is used incorrectly or there is a fault, the charger will prompt an error message for the user to view. As shown below: Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been disconnected from the charger Image: CONNECT BREAK! The battery has been incorrectly connected. Image: CONNECT BREAK! The charger has overheated. Power off the charger and allow it to cool. Image: CONNECT BREAK! Image: CONNECT BREAK! <td>10S 2A buttons to set the</td> <td>e charging current value. Check that the selected</td> <td></td> <td></td>	10S 2A buttons to set the	e charging current value. Check that the selected		
START > 2 Seconds Start charging program. When in charging mode, the TMCY "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. Start the charger is Start charging. Start charging program. When in charging mode, the TMCY "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. Start charging is Start charging. The connected battery has been disconnected. The battery cannot be charged is to control. ILI2S_TRAT_ > 2 Seconds Start charging program. When in charging mode, the TMCY "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. Start the chargen is Start charging program. When in charging mode, the TMCY "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. The connected battery has been incorrectly connected. Check all connections. HIGH CELL VOLT! The battery voltage is too high. The battery cannot be charged is stop high. The battery cannot be charged is too high. The battery cannot be char				
recommend a charging current according to the number of cells and capacity. The 10 second countdown will be displayed in the lower left corner of the current settings buttons will reset the countdown time. START > 2 Seconds START > 2 Seconds Start charging press and hold the "START" button for 2 seconds to start the charging program. When in charging mode, the "INC," DCC" and "ENT" buttons are not available. Press the "ESC" to stop charging. Start charging CELLS ERROR! The connected battery cannot be charged INC INC C CONNECT BREAK! The battery has been disconnected from the charger CELLS IMBALANCE! The calls of the battery cannot be charged OVER CAPACITY ! The connected battery cannot be charged. INC DEC Cand CELLS CONNECT BREAK! The battery cannot be charged INC INC C C C C C INC C C C C C C C C C 				
and capacity. The 10 second countdown will be displayed in the lower left corner of the current setting interface. The settings buttons will reset the countdown timer. START > 2 Seconds LI2s, 7a, 8.4v ball 005.47 00121) 3. Start charging Press and hold the "START" button for 2 seconds to start the charging press and hold the "START" button for 2 seconds to start the charging press and hold the "START" button for 2 seconds to start the charging press and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds to start the charging ress and hold the "START" button for 2 seconds t			CONNECT BREAK! The battery has been disconnected from the charger	
START > 2 Seconds > 2 Seconds OVERHEATING! 3. Start charging The charger has overheated. Power off the charger and allow it to cool. OVER CAPACITY! The connected battery cannot be charged. POLARITY REVERSE The battery has been incorrectly connected. Check all connections. HIGH VOLTAGE! The input voltage is too high. The battery cannot be charged ren of available. Press the "ESC" to stop charging. The connected battery has an incompatible number of cells. SAFETY TIMER! The connected battery has been charged successfully. SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.	and capacity. The	e 10 second countdown will be displayed in the		
START > 2 Seconds > 2 Seconds OVER CAPACITY! The connected battery cannot be charged. Dotation of 2 seconds to start the charging program. When in charging mode, the "INC", 'DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. The input voltage is too high. The battery cannot be charged HIGH CELL VOLT! The connected battery has an incompatible number of cells. SAFETY TIMER! The connected battery has not charged in a safe time. SETTINGS CHANGED The selected setting has been changed successfully. SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.				
> 2 Seconds Interconnected battery cannot be charged. L12s 7a 8.4v ball 005.47 00121 3. Start charging Press and hold the "START" button for 2 seconds to start the charging program. When in charging mode, the "INC", "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. The input voltage is too high. The battery cannot be charged HIGH VOLTAGE! The battery voltage is too high. The battery cannot be charged CELLS ERROR! The connected battery has an incompatible number of cells. SAFETY TIMER! The connected battery has not charged in a safe time. SETTINGS CHANGED The selected setting has been changed successfully. SHORT CIRCUIT! The input supply is unacceptable.	START			
3. Start charging Press and hold the "START" button for 2 seconds to start the charging program. When in charging mode, the "INC", "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. HIGH VOLTAGE! The input voltage is too high. The battery cannot be charged CELLS ERROR! The connected battery has an incompatible number of cells. SAFETY TIMER! The selected setting has been changed successfully. SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.				
L12s 7a 8.4v Press and hold the "START" button for 2 seconds to start the charging program. When in charging mode, the "INC", "DEC" and "ENT" buttons are not available. Press the "ESC" to stop charging. Internet work of the second seco	3 Start charging			
Image: Second and intervention of the press the "ESC" to stop charging. Image: Second and intervention of the press the "ESC" to stop charging. Image: Im	LI2s 7a 8.4v Press and hold the			
SAFETY TIMER! The connected battery has not charged in a safe time. SETTINGS CHANGED The selected setting has been changed successfully. SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.	program. When h		HIGH CELL VOLT! The battery voltage is too high. The battery cannot be charged	
SETTINGS CHANGED The selected setting has been changed successfully. SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.			CELLS ERROR! The connected battery has an incompatible number of cells.	
SHORT CIRCUIT! The charger output has been short-circuited. POWER SUP FAULT! The input supply is unacceptable.			SAFETY TIMER! The connected battery has not charged in a safe time.	
POWER SUP FAULT! The input supply is unacceptable.			SETTINGS CHANGED The selected setting has been changed successfully.	
			SHORT CIRCUIT! The charger output has been short-circuited.	
SELF TEST FAULT! The charger's self-test has failed. The charger cannot be used.			POWER SUP FAULT! The input supply is unacceptable.	
			SELF TEST FAULT! The charger's self-test has failed. The charger cannot be used.	



ifications
incations

ut	AC input 100-240V DC output 11V-18V
tput Power	100W
tery types	LiPo < LiHV
arging Current	2-10A
charge power	5W
tery Numbers	LiPo-2S \ LiHV-4S
ance Current	400mA/cell
ut Protection	Overcurrent
tput Protection	Overvoltage, undervoltage, short circuit, overheating, short circuit, reverse connection
rking Temperature	5-45℃
e	130*115*61mm
ight	380g
	•

he product specifications mentioned in this manual are for reference only. This is correct at the time of release, and is subject to change without notice.

8. After-sales and Warranty

Thank you for purchasing this SwellPro product, we will do our best to provide you with comprehensive after-sales service to fully protect your rights. If your product is at fault, please contact SwellPro after-sales staff.

1. The product is covered by a 12-month warranty.

2. Warranty repairs are free of charge for one year from the date of purchase. If the customer is unable to provide valid proof of purchase, the date will be based on the internal date code of the charger.

3. For repairs after the first 12 months of use, the cost will be charged as appropriate, and the customer shall bear the round-trip shipping costs.

Warranty does not cover damage due to neglect or incorrect usage of the charger including:

1. Product damage caused by failure to use a suitable input voltage as required.

2. Damage caused by not following the instructions.

Any man-made, accidental impact or other force majeure that causes damage to the product.
 Modification, disassembly or modification of the internal circuit of this product without the approval of the company.

5. Water immersion or intrusion, moisture or other foreign matter entering the product and causing damage.6. Aging, bumps and scratches on the surface of the product.

The user is responsible for any consequences caused by the operation of the charger. SwellPro is not liable for the costs beyond the cost of the product and reserves the right to modify the terms of this warranty which is subject to change without notice.

9.Warning

- 1. This product is not intended for use by persons with
- physical, sensory or mental disabilities or lack of
- experience and relevant knowledge (especially children).
- 2. This product is not a toy. Please keep away from
- children.3. If the product is in any way damaged, turn off the
- power to avoid the risk of electric shock.
- 4. This product is for indoor use only.



CE 🕱

The product specifications and information mentioned in this manual are for reference only and are subject to change without notice.

6